

ATTACHING THE CENTER STAND FOR BERG

1. Please put on the enclosed gloves to avoid the potential of fingerprint oils staining the cabinet during assembly.
2. Pull out the two inlays of the speaker. They are attached with magnets and simply pull off.
3. Put the two aluminum side-brackets on the speaker as seen in the drawing below, and attach them with the 4 M6 x 20 mm bolts, using the Allen wrench (hexagonal tool).
4. Attach the base-plate according to the drawing, so that the eight holes (four in the bottom of the side-brackets and four in the base-plate) match.
5. Attach the base-plate with the four M6 x 25 mm bolts and washers, using the Allen wrench (hexagonal tool).

ATTENTION:

The Vienna Acoustics logo on the center stand faces the front.

ACCESSORIES FOR BERG CENTER STAND:

BASE-PLATE: 1 pc.

SIDE-BRACKETS: 2 pcs., for connection between the speaker and the base-plate.

BOLTS: 4 pcs. M6 x 25 mm, including washers, for attaching the side-brackets to the base-plate.
4 pcs. M6 x 20 mm, for attaching the speaker to the side-brackets.

ALLEN WRENCH (hexagonal tool): 2 pc., for adjusting the bolts.

BANANA PLUGS: 2 pcs., silver plated, short version for convenient connection of speaker cables.

GLOVES: 2 pcs., for protecting the speaker against fingerprints.

